

QUICK START GUIDE SYNC E

POWER ON

Short Hold: Status LED flashes red and SYNC E is ready to be synchronized via app or external timecode


Long Hold: Status LED flashes green and SYNC E generates timecode with Time of Day (RTC)

POWER OFF

Long Hold: SYNC E turns off

MICROPHONE

When SYNC E is connected to stereo mic input of camera, SYNC E's internal scratch mic and the timecode will be recorded

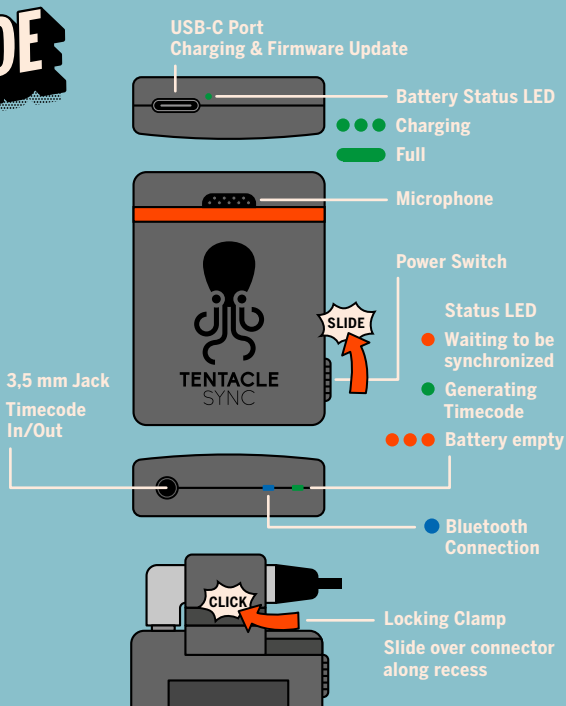

Find everything you need for your new SYNC E: manuals, apps and more. To synchronize, operate and control your SYNC E conveniently from a mobile device, simply download the Setup App.



tentaclesync.com/go

SYNC VIA BLUETOOTH

- **Download** Setup App
- **Switch On** SYNC Es
- **Open App** and add your SYNC Es to device list
- **Press SYNC** button
- **Set frame rate & timecode** in dialogue window
- **Press Start** to sync all devices in list

SYNC VIA CABLE

- **Short hold** Power Switch
- **Status LED flashes red** & SYNC E is ready to be synchronized by any Tentacle device or other TC source
- **Connect TC source** to SYNC E via suitable adapter cable
- **Status LED flashes green** & SYNC E is synchronized

CONNECTION TO RECORDING DEVICES

- **Connect** SYNC E to your recording device using a suitable adapter cable
- **Make sure** your recording device is **set correctly** and is receiving timecode
- **Keep** SYNC E **connected** to recording device at all times